



# BARAZIN

VERRE - ALUMINIUM - GLASS

## TECHNICAL INFORMATION ON MINI MILANO

### Step 1

-Install rail support (aluminum U channel), back corner (FBS9207-A) and rail (plastic U channel) on the back right and left sides of the cabinet.



### Step 2

-Install rail support (aluminum U channel) and rail (plastic U channel) on the top right and left sides of the cabinet.



### Step 3

-Install the spring cylinder on the two front corners (FBS9207-SX-L & FBS9207-DX-R) using the plastic flange.





# BARAZIN

VERRE - ALUMINIUM - GLASS

## TECHNICAL INFORMATION ON MINI MILANO


### Step 4

-Install the wheels on the two back corners and the two front corners assembled with the spring cylinder.




### Step 5

-Roll down the aluminum curtain in the cabinet and insert it in front of the corner brackets.

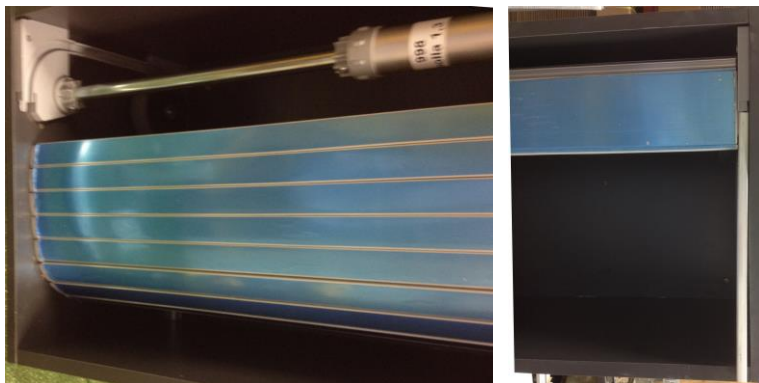

### Step 6

-Install the front rail support at 1/8 from the edge toward the interior of the cabinet. Slide the rail in the support and then lower the curtain.

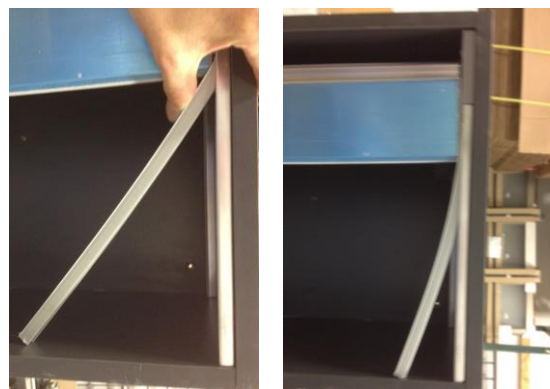



# BARAZIN

VERRE - ALUMINIUM - GLASS

## TECHNICAL INFORMATION ON MINI MILANO


### Step 7

-Pull down on the cord on the spring loaded cylinder and attach to the hook located behind the handle on the curtain.



### Step 8

-Pull and turn the adjustable knob to fine tune the tension and verify by raising and lowering the curtain.

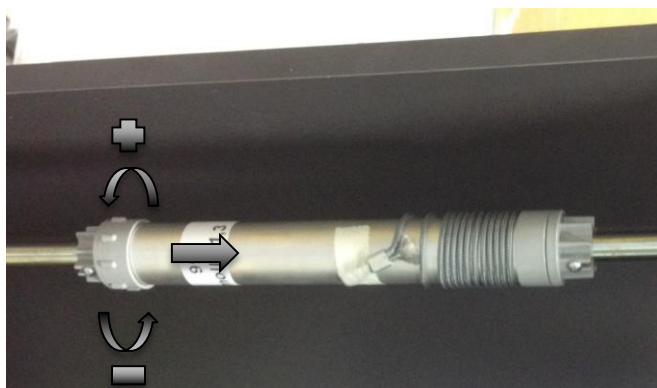

### Step 9

-Install the L-shaped valence by pushing in the two notches on the front corners, then remove blue protective film.

